

ShockWatch® Label Mounting Instructions

Rule of Thumb


1. Place labels on the right edge of the shipment.
2. Avoid the center of the package because the mounting location should be structurally sound.
3. Place labels on the longest side of the package
4. The heavier the shipment, the lower you should mount the label.
5. Place the Alert Sticker on the bill of lading as a reminder for receivers to check the indicator immediately upon arrival.

Recommended Placement

L-30 GREEN - 100G's at 50ms (milliseconds)
and L-35 ORANGE - 75G's at 50ms

Placement of Labels:

Placement is in upper right corner of the package.

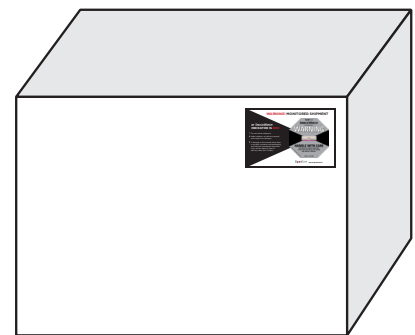

L-47 RED - 50G's at 50ms (milliseconds)

Placement of Labels:

A. For Packages 50 - 100 lbs (22.68 - 45.36 kg)

Placement is in upper right corner of the package.

B. For Packages 100-500 lbs (45.36 - 226.8 kg)

Placement is along the right edge, at least 24 inches (60.96 cm) from the bottom of the package.

